

7500B Unloader Valve Adjustment Stop Setting



To set the adjustment stop on the 7500B unloader:

Turn out #7502A set screw until it is almost completely out of knob (or remove it completely). With pump operating and wash gun trigger depressed, rotate #7503 adjustment knob clockwise to increase pressure or counterclockwise to decrease pressure until desired pressure is obtained. Turn in #7502A adjustment set screw until it will not go in any further. (Do not overtighten) This will prevent turning the #7503 adjusting knob clockwise and thus increasing the pressure, but will allow you to still decrease the pressure by turning the knob counterclockwise.

